

22MM

RUBINETTERIE
treemme

-  ISTRUZIONI DI MONTAGGIO
-  INSTALLATION INSTRUCTIONS
-  INSTRUCTION DE MONTAGE



Treemme Rubinetterie
Arredamento

Art. 22 MM



LAVABO A MURO INCASSO
CONCEALED WASHBASIN MIXER
MITIGEUR LAVABO A' ENCASTRER



Grazie per aver scelto Rubinetterie Treemme. Perché il Suo rubinetto funzioni correttamente e possa durare nel tempo, occorre che vengano rispettate le procedure di installazione ed manutenzione illustrate in questo opuscolo.

Thank you for selecting Rubinetterie Treemme. In order to allow a proper functioning of your fittings and a longlasting reliability, you must carefully observe our care and installation instruction described on this brochure.

Nous vous remercions d'avoir choisi Rubinetterie Treemme. Afin que cet appareil fonctionne d'une manière correcte et puisse durer longtemps, il convient de respecter les modalités d'installation et d'entretien indiquées dans cette notice.






Preliminari - Prima di procedere all'installazione è necessario pulire accuratamente le tubature per eliminare eventuali detriti in esse presenti












Preliminary information - Before starting with the installation it is necessary to clean the pipes carefully in order to eliminate any deposit which may be found inside them.

Preliminaires - Avant de monter les mitigeur, il faut bien nettoyer les tuyaux pour éliminer toutes les impuretés à l'intérieur.









IMIS00045

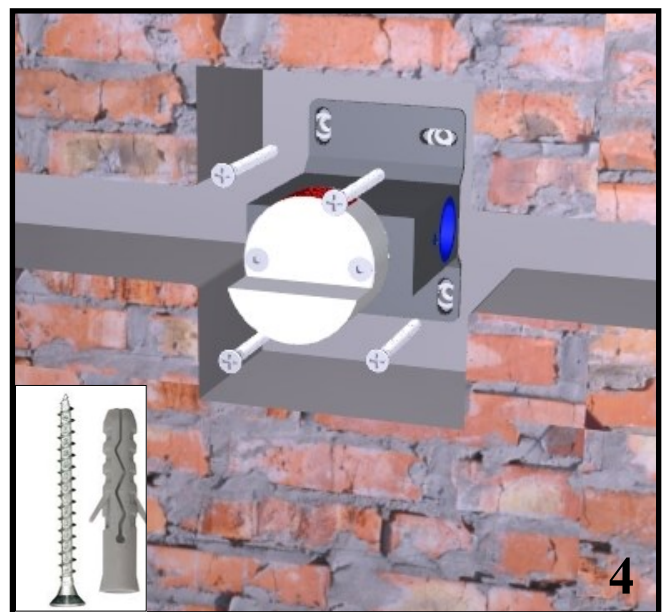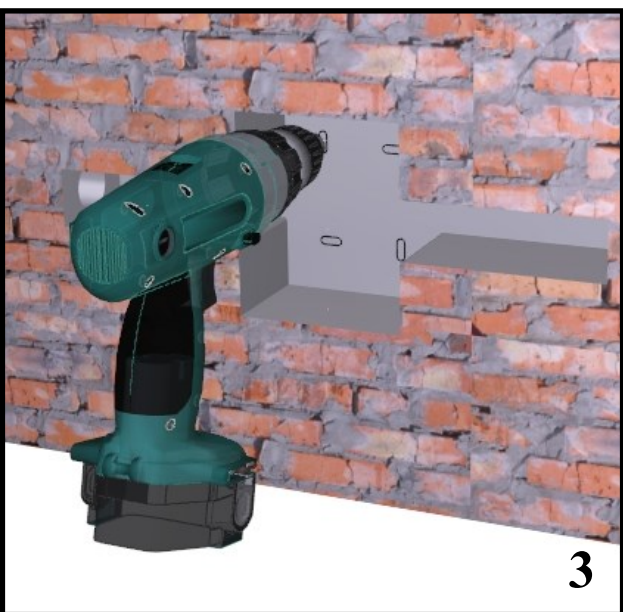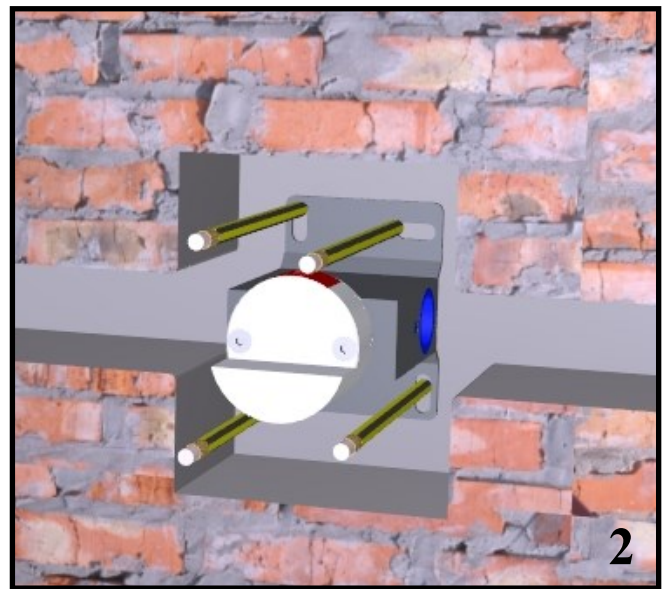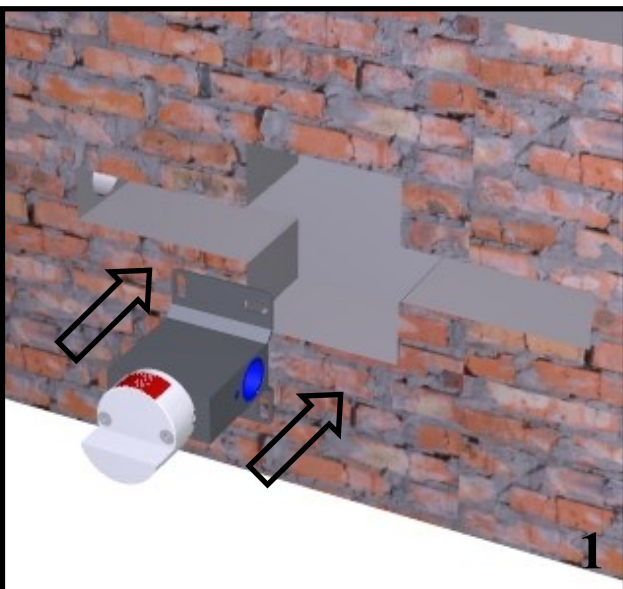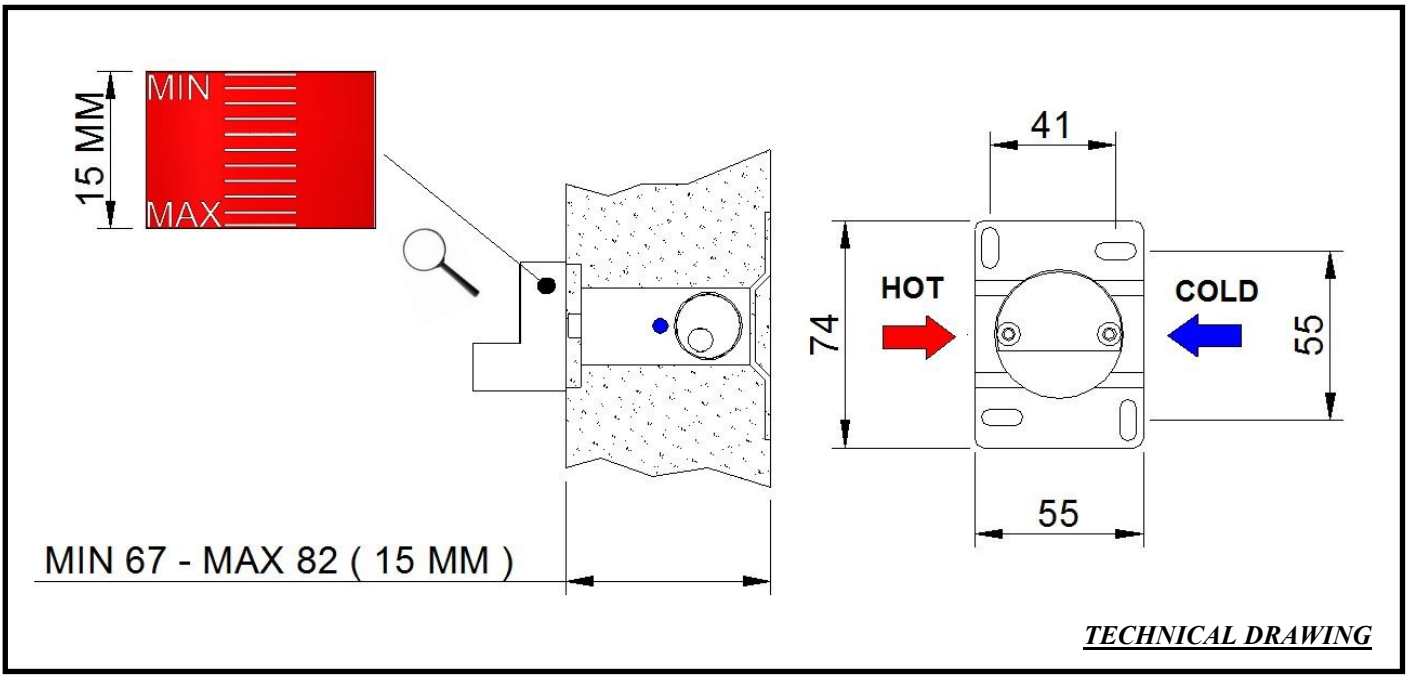

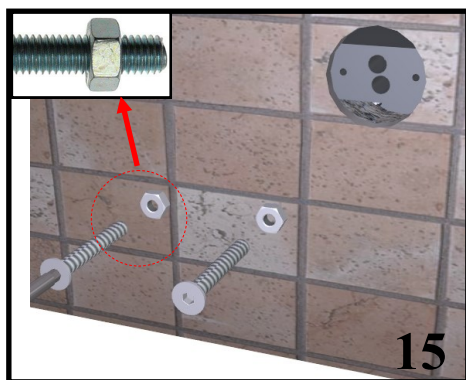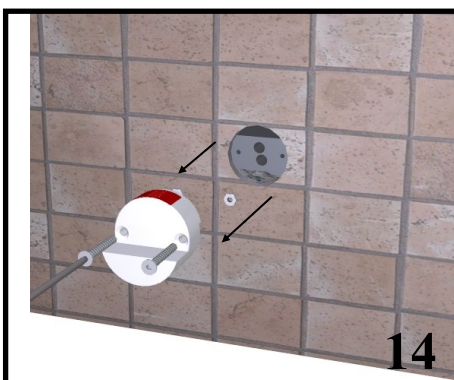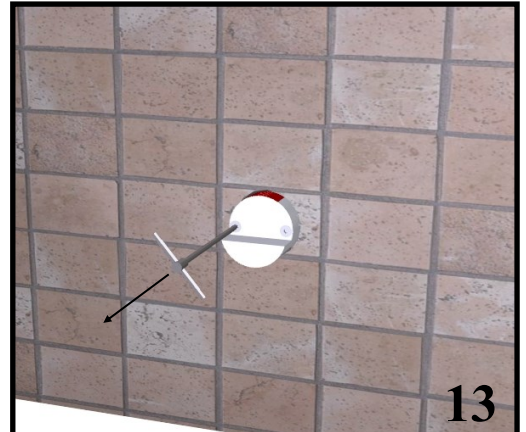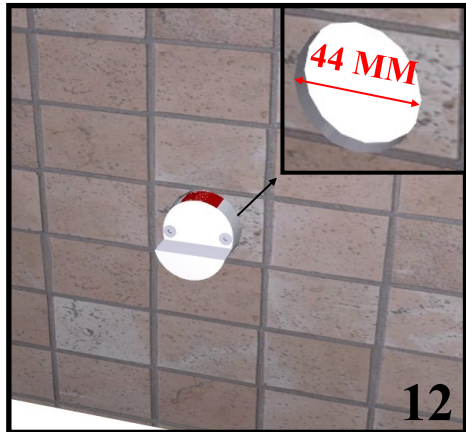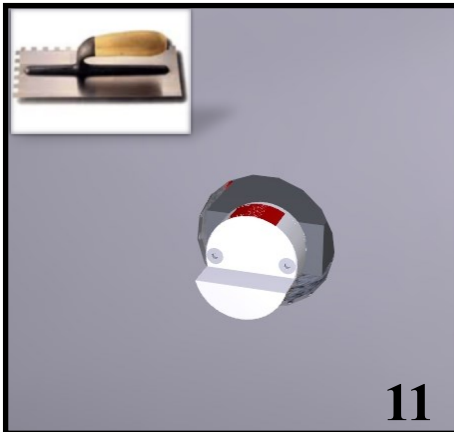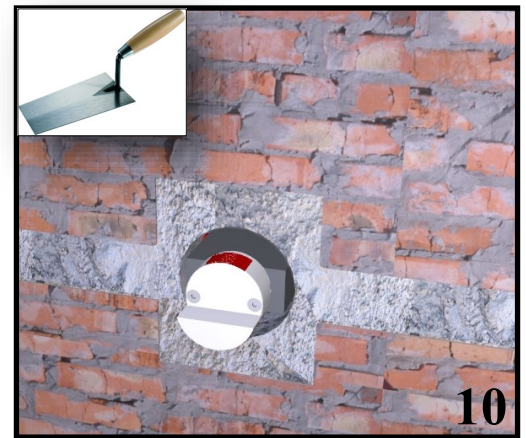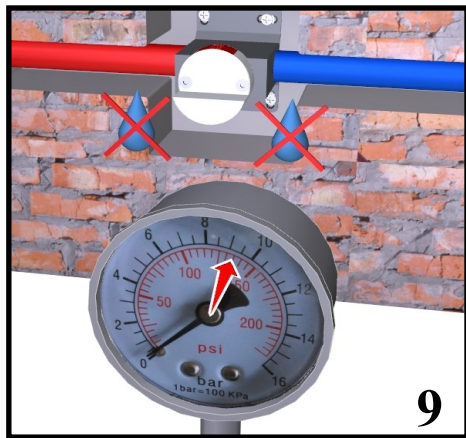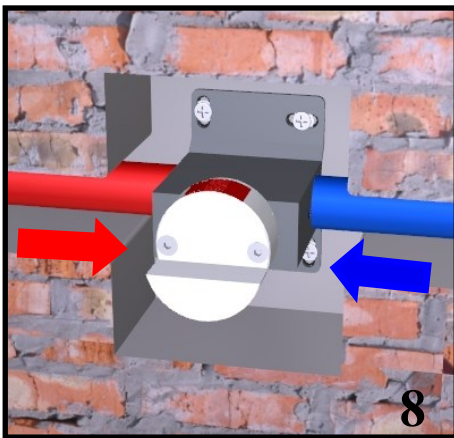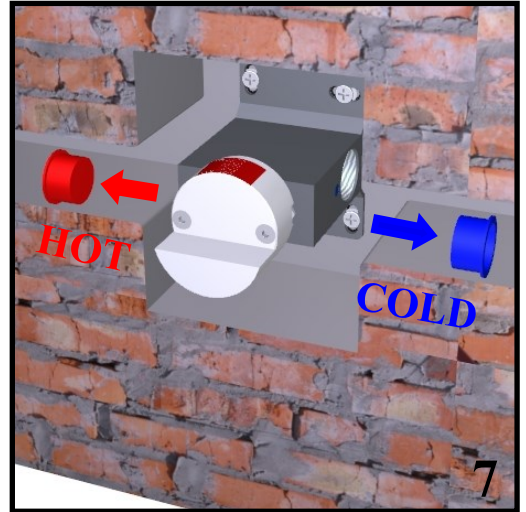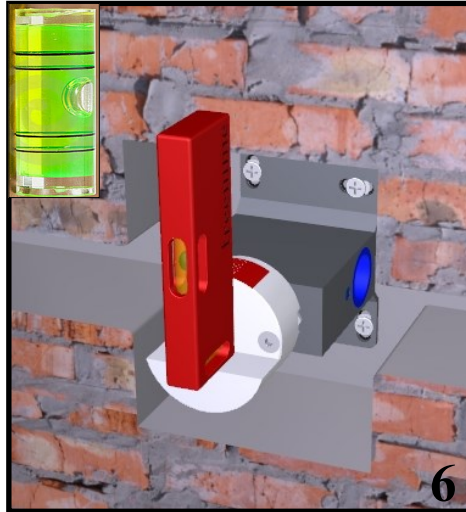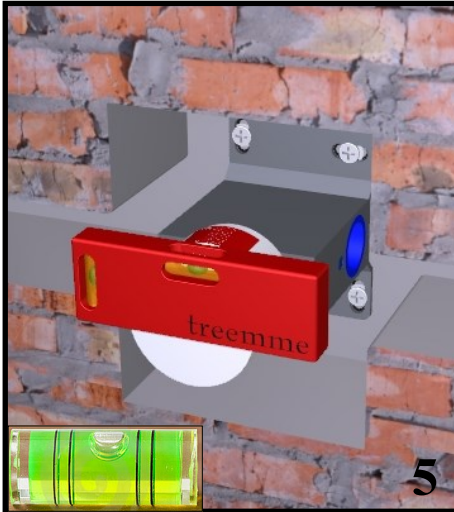

22MM

RUBINETTERIE
treemme

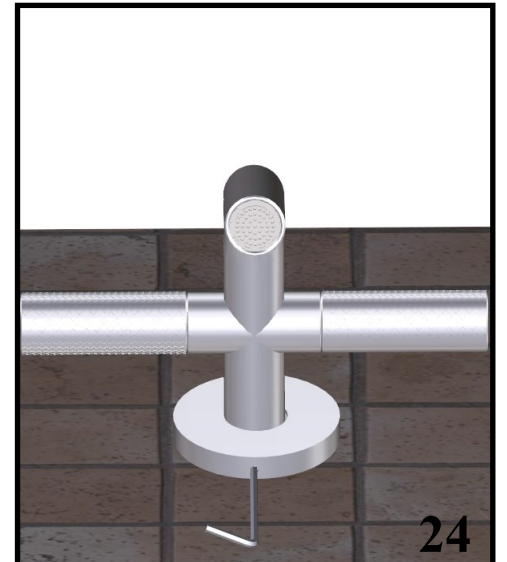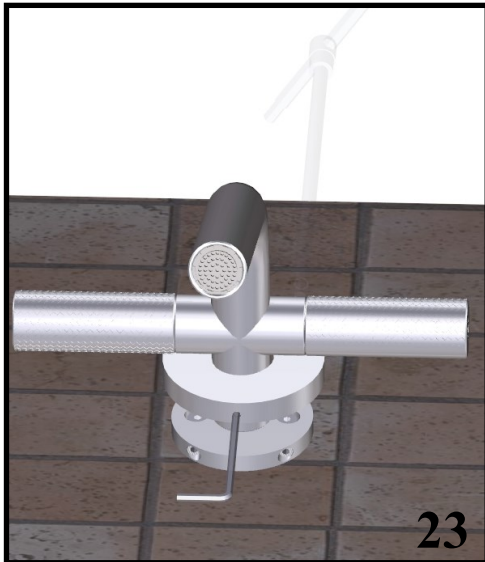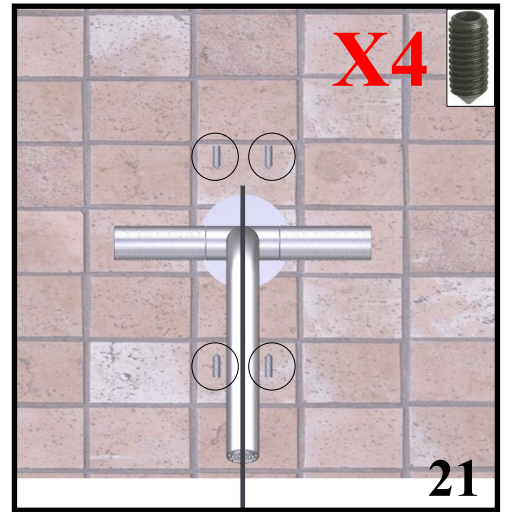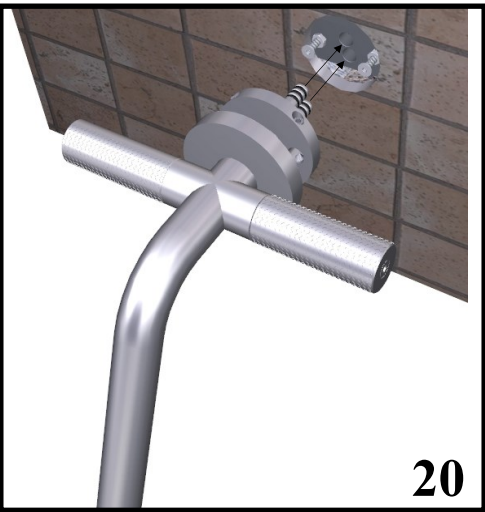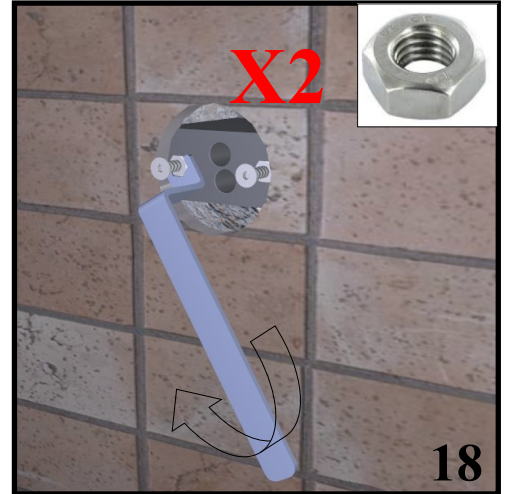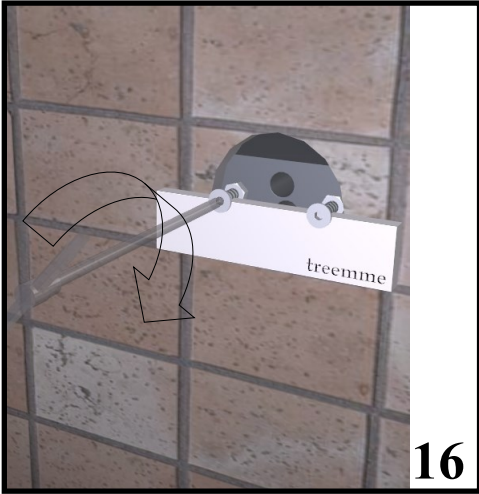

22
mm
Design by
Cognigni &
Ing. Castagnoli

RUBINETTERIE
treemme

IMIS00045